




## Machine operation

Additional information (including troubleshooting and service) can be found in the individual chapters of the instructions for use.

### Sort laundry according to care symbols:

-  Do not tumble dry
-  Suitable for tumble drying - at low drying temperature
-  Suitable for tumble drying

Sort by:

**Material thickness:** Whenever there is greater load than the dryer can handle, separate laundry according to weight (e.g. dry towels and thin underwear separately).

**Type of material:** Cotton (linen); synthetic textiles (easy care).

**Degree of drying:** Cupboard dry, iron dry etc.

**Do not tumble dry:** Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

### Preparing laundry

Check that all fastenings are closed and that pockets are empty. Please ensure that there are no cigarette lighters in the wash. Turn laundry inside out.

### Opening door

Pull the door handle. If the child safety lock is activated, please deactivate it (additional information can be found in the "Door Reversibility/Child Safety Lock" chapter of the instructions for use).

### Loading dryer and closing door

Place laundry loosely in the drum to achieve equal drying throughout. Then close the door.

### Switching on machine and selecting programme

Select the drying programme required by turning the programme selector knob (for information, refer to programme table).

### Selecting options (if available)

Select the option required by pressing the corresponding button.

The indicator lamp above the relevant button lights up to confirm your selection. A fast blinking led indicates a wrong selection is made (incompatible options). Press the button again to cancel the option.

### Starting dryer

The drying programme is started by pressing the "Start (Pause)" button. The relevant indicator lamp lights up.

**Changing programme selection:** If the programme selected is changed during drying, the dryer stops. The Drying indicator lamps flashes. To operate the new programme, again press the "Start (Pause)" button.

**Interrupting programme:** To interrupt the dryer during the drying cycle, set the programme selector knob to "Airing" and press the "Start (Pause)" button. Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the drying cycle stops automatically if you open the door. To restart, after door opening, close the door and press the "Start (Pause)" button again.

### Programme end - unloading dryer

● End of cycle **End:** Take the laundry out of the dryer. The drying process is complete and the anti-crease phase has been reached (active).



**Anti-Crease:** If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals to prevent the laundry from creasing.

### Switching dryer off


Set the programme selector knob to "Off".

**Cleaning the lint filter:** Open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close lint filter and push firmly back into place.

**Emptying water container:** Pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

If required, activate child safety lock (additional information can be found in the "Door Reversibility/Child Safety Lock" chapter of the instructions for use).

**Please note:** Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

Overview of programmes						Options			Approximate drying times (in minutes)	
Programmes / Drying levels			Type of textile	Fabrics	Volume of load kg	Gentle Gentle	Buzzer Buzzer	Start delay <b>Start</b> delay	Very wet load	Wet load
Cotton	Ready to wear	Multi-layered, thick laundry such as: terry towels, dish cloths and dry towels, bed linen, underwear, terry towelling bath robes.	Cotton or linen hot wash / coloured laundry <b>Cotton</b> Max. 7 kg	3.0 7.0	X	X	X	95' 170'	80' 140'	
	Cupboard dry *	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		3.0 7.0	X	X	X	85' 160'	70' 120'	
	Iron dry *	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		3.0 7.0	X	X	X	70' 120'	60' 100'	
Mixed fabrics	Ready to wear	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry <b>Synthetics</b> Max. 2.5 kg	1.0 2.5	X	X	X	50' 70'	40' 50'	
	Cupboard dry *	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		1.0 2.5	X	X	X	40' 60'	30' 40'	
	Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		1.0 2.5	X	X	X	30' 50'	20' 35'	
Delicate plus	Cupboard dry	Low drying intensity for delicates and items labelled with  , such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres such as polyamide, nylon, polyacrylic, etc. <b>Delicate plus</b> Max. 2.5 kg	2.5	X	X	-	100'	85'	
Airing	Laundry is aired and refreshed for 30 minutes without heating.		<b>Airing</b>	-	-	-	-	-	-	
Drying times	Completes drying or dries single items (suitable for all fabrics).		<b>Drying times</b> 10' 20' 30' 40' 60' 90'	-	X	X	X	10' 20' 30' 40' 60' 90'		

\* Test programme in accordance with EN 61121.

## How to proceed if ...

**...you want to correctly care for and clean your dryer:**

**Clean the filter at the end of every cycle.**



- Open the door.
- Pull the filter upwards.
- Open the filter.
- Brush lint using a soft brush or your fingertips.
- Close the filter.
- Push the filter back into place.

**Empty the water container at the end of each drying cycle.**



- Pull the handle to remove the water container.
- Empty the water container.
- Replace the water container when empty by pushing it **completely** back in place.

**Clean the heat exchanger at least every month.**  
(For further information see chapter "Heat Exchanger" in the Instructions for Use).

- Remove fibres in and around the water evacuation hole at least once per month.

**...you want to check the dryer yourself first:**

(If your machine is not functioning correctly, please check the following points before phoning for the customer service – also refer to relevant chapter in the instructions for use)

**Drying takes too long / laundry is not dry enough.**



- Has the correct drying programme been selected?
- Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)?
- Is the lint filter dirty (filter indicator light on)?
- Is the heat exchanger dirty? (for more information, refer to the instructions for use)
- Is the room temperature too high?
- Are the "End of cycle" and "Anti crease" indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.

**The dryer will not operate (after a power failure, always press the "Start (Pause)" button).**



- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has a drying programme been selected?
- Has the "Start (Pause)" button been pressed?

**Lint filter, water container or heat exchanger indicator lamps on.**



- Is the lint filter clean?
- Is the water container empty?
- Has the water container been inserted correctly?
- Is the heat exchanger clean?

**Water droplets underneath the dryer.**



- Has the heat exchanger been inserted correctly?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been inserted correctly?

### AFTER-SALES SERVICE

If the fault is still present once the above checks have been undertaken or should the fault occur for a second time, switch the machine off. Please contact your after-sales service representative (for more information, refer to the warranty manual).

Please have the following details ready when calling your After-Sales service representative:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.

**SERVICE 0000 000 00000**




Before using the machine, please also read the instructions for use carefully!

AWZ 8477

## Quick Reference Guide

GB

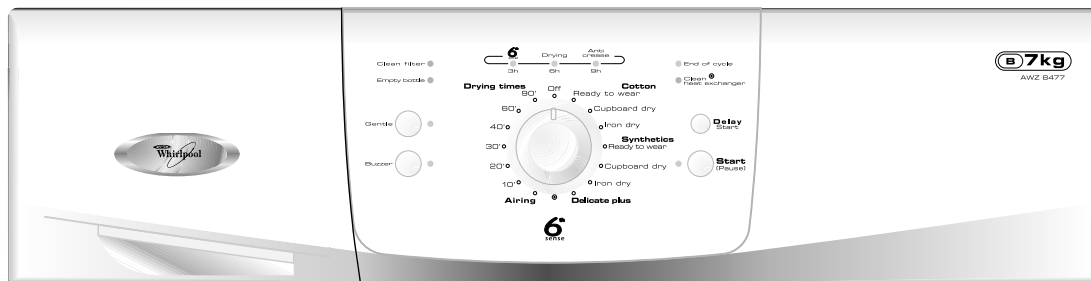

### Programme selector knob


The drying programme is selected by turning this knob.



### "Start (Pause)" button

The drying programme is started by pressing this button. The indicator lamp flashes during the selection phase and lights up during drying.

### Programme sequence

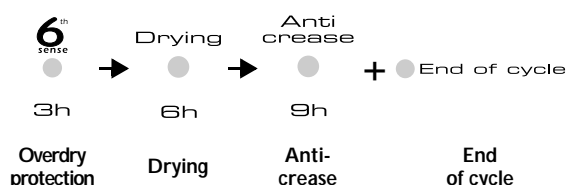

### Options



#### Gentle

Reduces drying intensity (recommended for delicate items).



#### Buzzer

Signals/sounds end of drying cycle.



#### Delay Start

Delays the start of the drying cycle by 3 to 9 hours.

Press the start delay button and selection appears on the programme sequence. Then press the "Start (Pause)" button to confirm the final selection and to start the dryer. During start delay phase, the time selected led is blinking. During countdown, the remaining time is indicated. To cancel the previously set time delay, set the programme selection knob to "Off" or press the start delay button to make the 3 lights off.

## Indicator lamps

### Clean filter ● Filter

The indicator lamp lights up when the filter and/or heat exchanger need cleaning. **Clean the filter at the end of every cycle.**

### Empty bottle ● Water container

The indicator lamp lights up when the water container needs to be emptied. The drying cycle is automatically interrupted. Empty the container and restart the drying programme. **Empty the water container after every drying cycle.**

### Clean ● heat exchanger

#### Clean heat exchanger

The Led lights up after 30 cycles when the heat exchanger needs to be cleaned. Clean the heat exchanger. Then for reset the led indication, turn the programme selector knob to the vertical position indicated by the symbol "●" and press the "Start (Pause)" button during 3 seconds until led switches off.



### Overdry protection

The indicator lamp lights up when a humidity controlled program is selected, to indicate the working protection function. Function is not active in time controlled programmes 10', 20', 30', 40', 60', 90' and "Airing".